

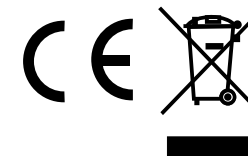


RGBOX4 + RGBA or RGBW DMX / DALI controlled system with extension ( optional)

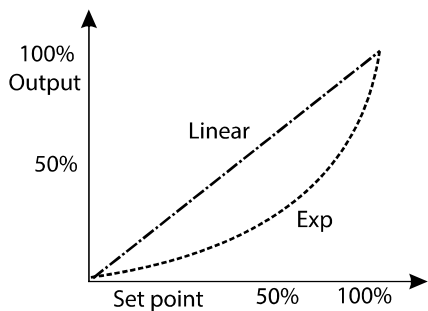

DALI

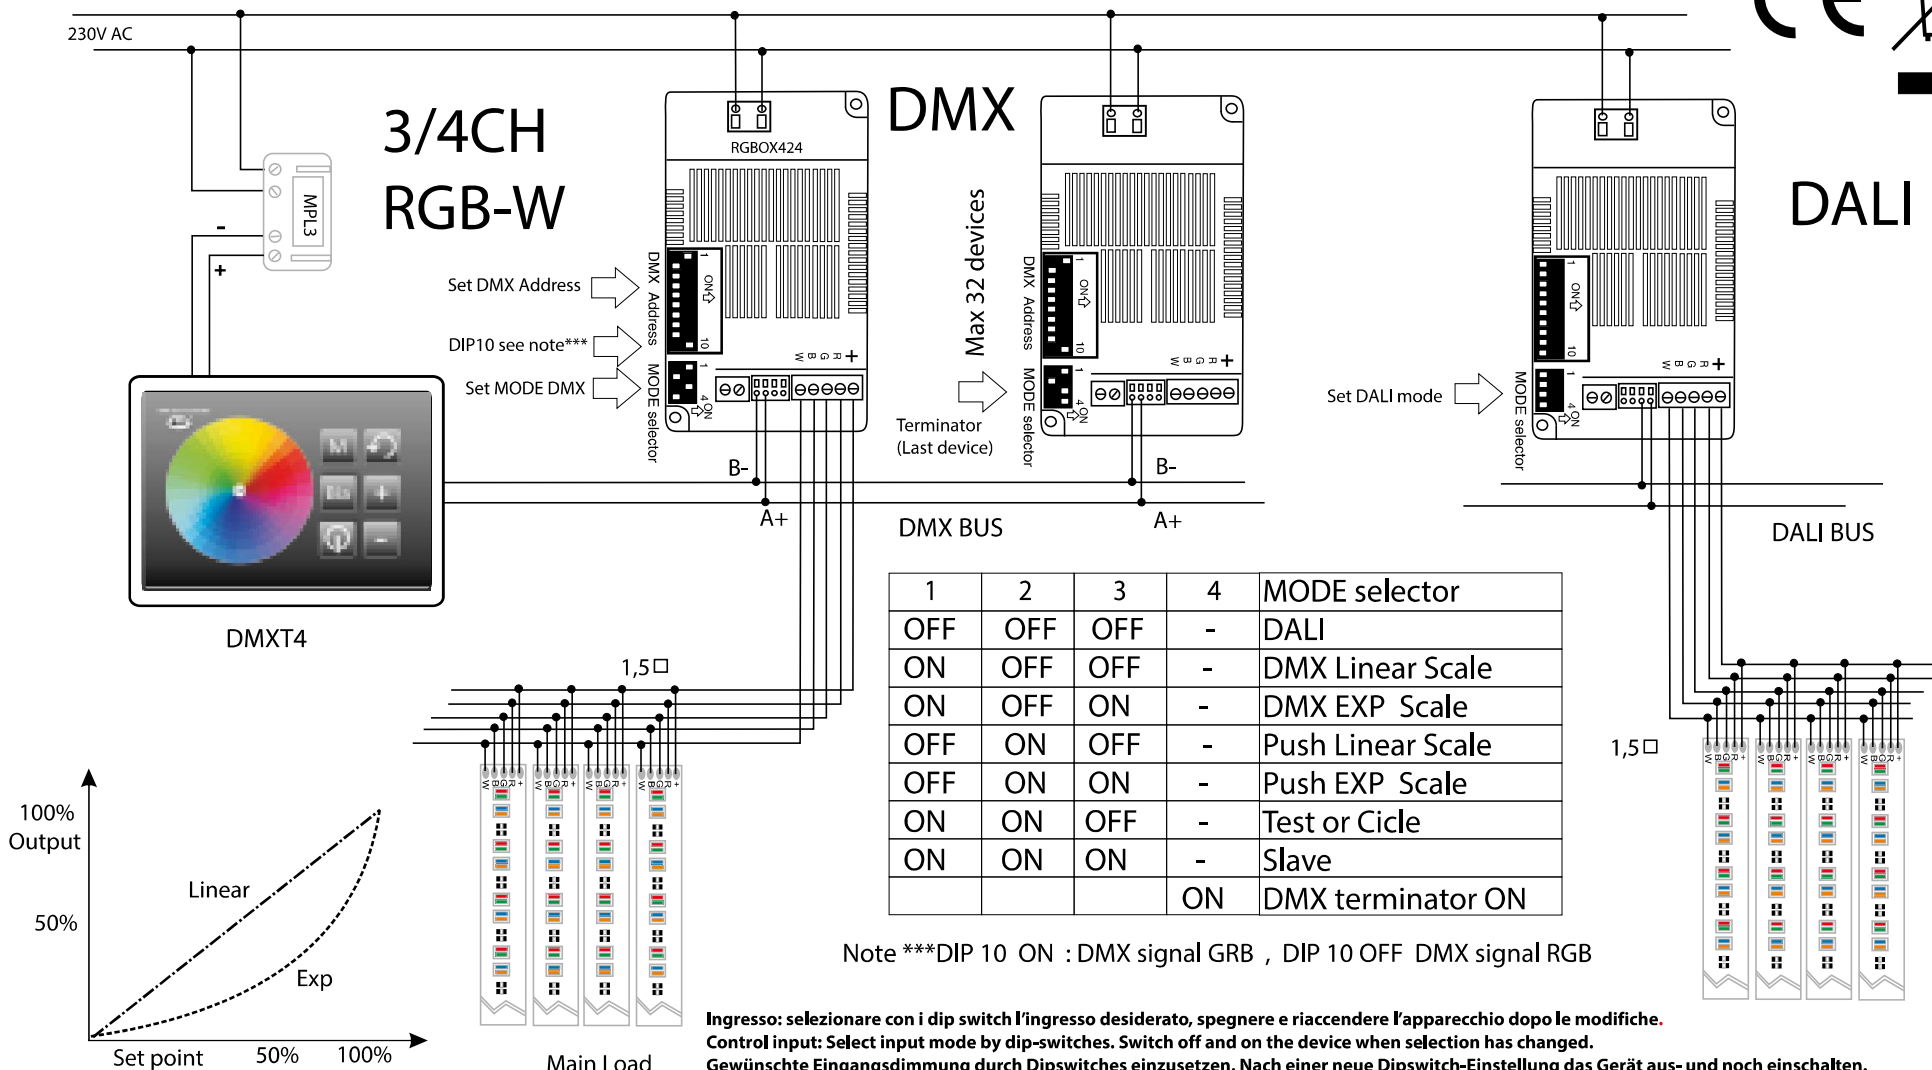



Note \*\*\*DIP 10 ON : DMX signal GRB , DIP 10 OFF DMX signal RGB

**Ingresso: selezionare con i dip switch l'ingresso desiderato, spegnere e riaccendere l'apparecchio dopo le modifiche.**  
**Control input: Select input mode by dip-switches. Switch off and on the device when selection has changed.**  
**Gewünschte Eingangsdimmung durch Dipswitches einzusetzen. Nach einer neue Dipswitch-Einstellung das Gerät aus- und noch einschalten.**  
**Entrée: sélectionner l'entrée souhaitée par les dip switch. Eteindre et reallumé l'appareil après changement de sélection.**  
**Entrada: seleccionar la entrada deseada con los dip switches. Apague y vuelva a encender después de los cambios**

Master Slave Slave

230V AC

1	2	3	4	MODE selector
OFF	OFF	OFF	-	DALI
ON	OFF	OFF	-	DMX Linear Scale
ON	OFF	ON	-	DMX EXP Scale
OFF	ON	OFF	-	Push Linear Scale
OFF	ON	ON	-	Push EXP Scale
ON	ON	OFF	-	Test or Cycle
ON	ON	ON	-	Slave
			ON	DMX terminator ON

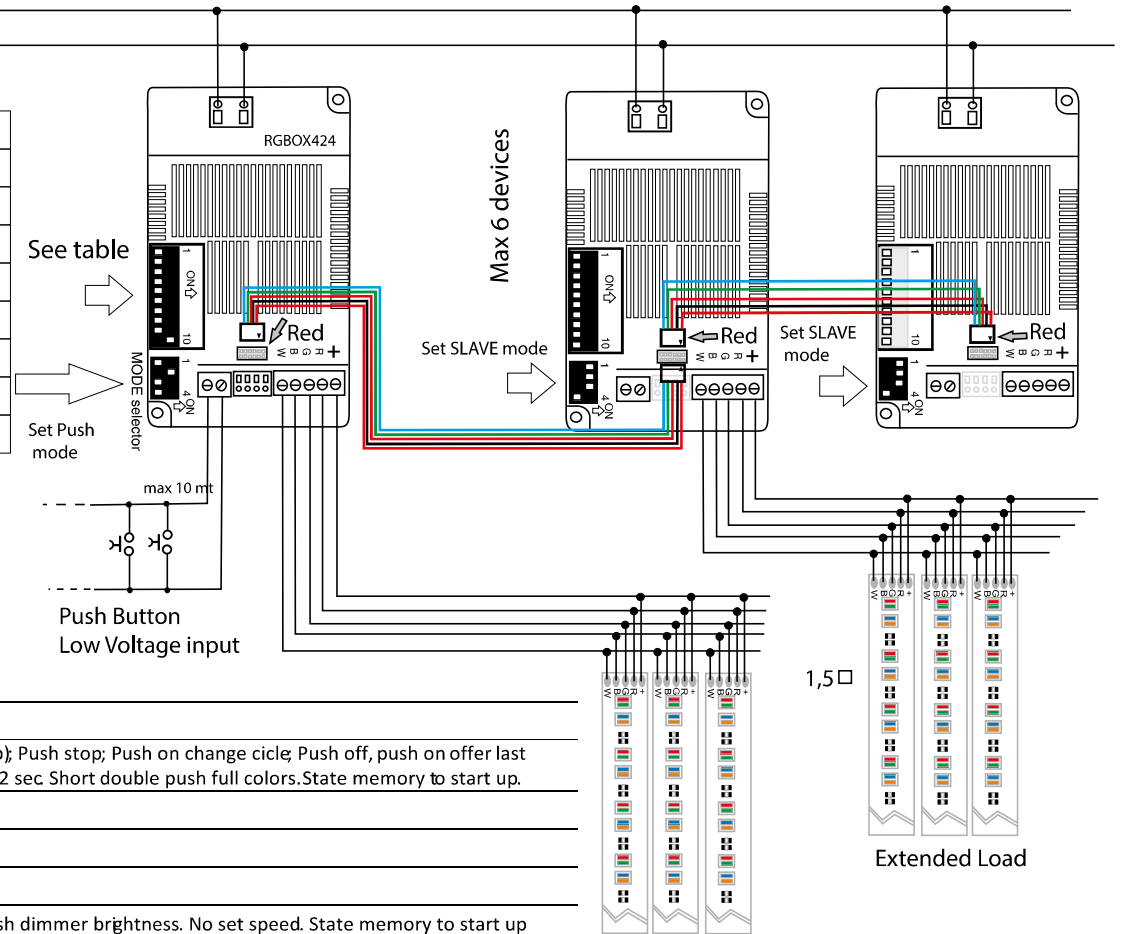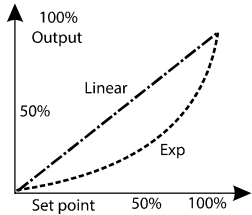

1	2	3	4	5	6	7	8	9	10	Functions in Push MODE
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	Long push cicle RGB and 8 step W (step by step); Push stop; Push on change cicle; Push off, push on offer last state. Set Speed to 13 sec step or loop speed 42 sec. Short double push full colors.State memory to start up.
<b>ON</b>	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	Set speed to 7 sec step or Loop speed 28 sec
OFF	<b>ON</b>	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	Set speed to 4 sec step or Loop speed 14 sec
OFF	OFF	<b>ON</b>	OFF	OFF	OFF	OFF	OFF	OFF	OFF	Set speed to 2 sec step or Loop speed 7 sec
OFF	OFF	OFF	<b>ON</b>	OFF	OFF	OFF	OFF	OFF	OFF	Step by step R-G-B-off or R-G-B-W-off; long push dimmer brightness. No set speed. State memory to start up
OFF	OFF	OFF	OFF	<b>ON</b>	OFF	OFF	OFF	OFF	OFF	Long push > 2 sec loop RGB/W, offers primary and secondary colors; Push stop, push off, push on last state.Loop speed configurable. State memory to start up
OFF	OFF	OFF	OFF	<b>ON</b>	<b>ON</b>	OFF	OFF	OFF	OFF	To start up Loop RGB/W; No commands. Loop speed configurable. Green color to start up
OFF	OFF	OFF	OFF	OFF	OFF	<b>ON</b>	OFF	OFF	OFF	Chromoterapy; 7 colours step by step. No set speed. Off state to start up
OFF	OFF	OFF	OFF	OFF	OFF	<b>ON</b>	<b>ON</b>	OFF	OFF	Chromoterapy; 7 colours automatic; 7 sec step. Push stop or start loop.No set speed. Off state to start up
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	N.C.
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	<b>ON</b>	ON= 3 channels RGB OFF= 4 channels RGBW

Main Load  
1,5□  
Extended Load  
**3/4CH  
RGBW  
Push**